



MOTOROLA



Starfish

Smart Connected Solutions

User's Guide

StarTAC clipOn Organizer, Synchronization, and TrueSync Desktop

www.starfish.com

www.mot.com

Copyright (c) 1999 Starfish Software, Inc. All rights reserved. Starfish, TrueSync, Sidekick, EarthTime and the Starfish logo are trademarks of Starfish Software, Inc. For TrueSync Plus: U.S. patent nos. 5,519,606 and 5,778,346; other patents pending. For TrueSync Desktop: U.S. patent nos. 5,519,606, 5,778,346, 5,845,257, and D388,776; other patents pending. For the StarTAC clipOn Organizer device: U.S. patent no. 4,369,516. The furnishing of the Software Product, any accompanying product, or any related documentation or materials does not give you any license to any patents. Motorola and StarTAC are trademarks of Motorola, Inc. Any other trademarks are the property of their respective owners.

Important:

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference; (2) This device must accept any interference received including interference that may cause undesired operation.

Contents

Introduction	1
Introducing the StarTAC® clipOn Organizer	1
About Starfish TrueSync technology	2
Connecting the clipOn to your StarTAC.	2
Chapter 1	
Getting started	3
Turning on the StarTAC clipOn Organizer	3
Getting started with the Setup Wizard.	4
Using the clipOn Home screen and views.	7
Synchronizing with the clipOn	8
Chapter 2	
Using the StarTAC clipOn Organizer	9
Calling with the StarTAC clipOn	9
Using Contacts.	10
Using the Calendar.	15
Using To Do Lists	18
Using Memos	21
Using Time Zones	23
Using Preferences	25
Chapter 3	
Product care	27
Removing the clipOn from the phone	27
Installing new batteries	27
Resetting the clipOn	28
Charging the phone with the clipOn connected	29
Screen care.	29

Chapter 4

**TrueSync Desktop
and TrueSync Plus** **31**

Introducing TrueSync technology 31

Requirements 32

Installing the product 32

Uninstalling your product 34

Starting TrueSync Desktop 34

Starting TrueSync Plus. 35

About the documentation 35

Chapter 5

Synchronizing **37**

Starting TrueSync: 37

Setting up TrueSync 37

Changing the TrueSync setup 40

Changing your preferences 44

Using the TrueSync Log 45

Setting up multiple users. 45

Staying up to date with TrueSync Central 46

Chapter 6

TrueSync Desktop **47**

Using TrueSync Desktop’s features 47

Customizing the Toolbar. 48

Setting preferences. 48

Chapter 7

**TrueSync Desktop:
Calendar view** **51**

Using the Calendar view. 51

Viewing your Calendar 52

The Weekly and Monthly views 53

The Yearly View 54

Scheduling events 54

When you travel: changing time zones 55


Entering To Do items and calls 56

Chapter 8	
TrueSync Desktop: Contacts view	57
Using the Contacts view	57
Cardfile basics	57
Creating a cardfile	59
Adding cards	59
Chapter 9	
TrueSync Desktop: Memos view	61
Using the Memos view	61
Memo files, folders, and memos.	62
Creating memos	63
Changing margins and tabs	63
Chapter 10	
TrueSync Desktop: EarthTime view	65
The EarthTime map	65
Selecting cities	66
Changing the Local Time	67
Changing the Home Clock.	67
Chapter 11	
TrueSync Desktop: Printing	69
Using the Printing options	69
Calendar printing	69
Printing in Contacts view	70
Printing in the Memos view	72
Glossary	73
Index	77

Introduction

Introducing the StarTAC® clipOn Organizer

Congratulations on your purchase of the StarTAC clipOn Organizer. Attaching directly to your StarTAC phone, the StarTAC clipOn enables you to store, view, and edit thousands of names, numbers, appointments, notes, and tasks in a space smaller than the average wallet.

When the clipOn is attached to the StarTAC phone, placing a call is easy: select a contact on the clipOn and press the  button. The clipOn promptly dials the number for you.

 
Customize the clipOn to work the way you do. For example, select right-handed or left-handed operation with one easy choice on the Preferences screen.

Add contacts, names, tasks, and events on your clipOn, and then synchronize to a personal information manager (PIM) such as TrueSync® Desktop. TrueSync Desktop is an easy-to-use personal information manager that is included with your purchase. To learn more about TrueSync Desktop and synchronization, see Chapters 5 and 6.

Package Contents




Belt holster



clipOn



 Connector cable



Protective cover



CD-ROM



Documentation

 
About Starfish TrueSync technology

TrueSync's unique architecture provides one-step synchronization support for many popular PIMs, devices, and services (referred to as accessors). Starfish provides frequent free accessor updates, to ensure that customers can synchronize with the most recent releases of supported software and devices. See "Introducing TrueSync technology" on page 31 to learn how to obtain free updates.

Connecting the clipOn to your StarTAC

Remove the protective plastic cover by turning over the clipOn and sliding the cover toward the spring clip. Lift and detach the cover. Turn off the StarTAC phone before attaching the clipOn.

- 1 Insert the clipOn's spring clip into the slot on the back of the phone that is used to attach the phone's auxiliary battery.
- 2 Slide the clipOn toward the opposite end of the phone.
- 3 Insert the connector on the bottom of the clipOn into the accessory connector on the bottom of the StarTAC telephone, and apply light pressure to ensure that it is firmly attached.

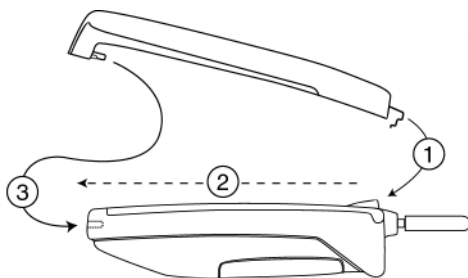




















NOTE If you are using vibration mode with an analog phone, vibration mode will be turned off when you connect the clipOn with your phone.

Getting started

Turning on the StarTAC clipOn Organizer


Turn on the StarTAC clipOn by pressing any key. The seven clipOn keys are described here:

Key	Name	Description
	Home	Press  to go up one level; press and hold again to return to the main (Home) screen. At the Home screen, turn off the clipOn by pressing and holding  for one second.
	View	Press  to see a menu of current options, such as Daily, Weekly, and Monthly views in the Calendar.
	Select	Press  to choose an option.
	Edit	Press  to add or edit contacts, tasks, or events.
	Call	With the phone attached and turned on, press  , select from the list of the last 10 numbers called, and press  to dial. Or, highlight a valid phone number in the Contacts, Calendar, or To Do views, then press  to dial the number.

Key	Name	Description
	Back/Up	Use  and  to scroll or move the highlight through a list or screen.
	Next/Down	When adding or editing text, use  or  to move from one letter or number to another.

Getting started with the Setup Wizard

 
Before using the clipOn, you will need to complete the Setup Wizard. Start the Setup Wizard by pressing any key to turn on the clipOn.

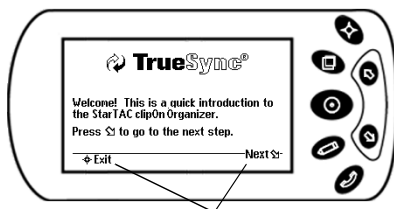

Press  to continue.

The status bar displays labeled icons that tell you which functions you can perform.

 In the second Wizard screen, select your user profile. Your selection determines which set of pre-defined QuickLists is offered when you add a new event, contact, or task. These lists will be updated as you enter new information. The profile also determines which fields will be used for contact information.

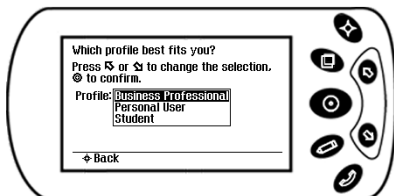




 Use  or  to highlight a profile, and then press  to select it.



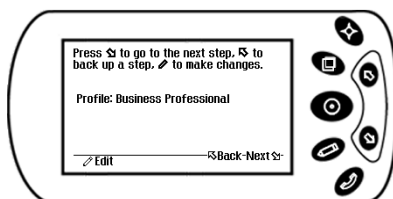

Press  to return to the previous screen.




NOTE You can change your selected user profile later. To change it, open the TrueSync window (see “Starting TrueSync:” on page 37 for details), choose Client | StarTAC clipOn options, click the QuickLists tab, then click Reset and choose a new profile.

 
The next Wizard screen confirms your profile selection.




Press  if you want to change your profile, then press  to continue.


Next, enter your first name, using  and  to select the letters of your name. To scroll quickly, hold down  or .


After you have highlighted a choice, press . If you make an error, select Erase. If you want to enter numbers, press . To return to letters, press  again.

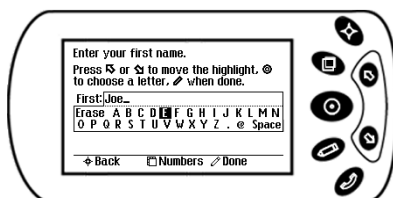



 
When your first name is spelled correctly, press .

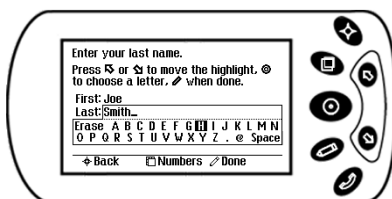 
Now enter your last name, using the keys described previously.







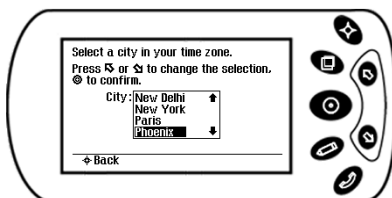


When your last name is spelled correctly, press .

 
After checking your entries to make sure they are correct, press .


The next task is to customize the time zone setting. Use  and  to select a city in your time zone.





Press  to continue with the Wizard.

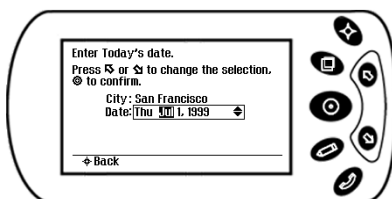


 
To enter the correct date, use  and  to select the month, then press . Then use  and  to select the correct day, and press  to enter your choice. Follow this same procedure to enter the year.




Press  to enter your choice.

After you have entered the year, select the time, then press  when you have finished. Note that the date and time on the clipOn are updated from your PC when you synchronize.

 
The next screen shows a summary of your settings. If they are correct, press  to continue.


 
 
Use  and  to select each digit of the “default” area code. Press  to enter each choice, then press  to confirm the area code. The clipOn will use this area code when you select a phone number to dial that includes seven digits only (does not include an area code). Enter your local area code unless you make most of your calls to a different area code. For information about placing calls with the clipOn, see “Calling with the StarTAC clipOn” on page 9.

Now press , and you are ready to start using the StarTAC clipOn.


Using the clipOn Home screen and views



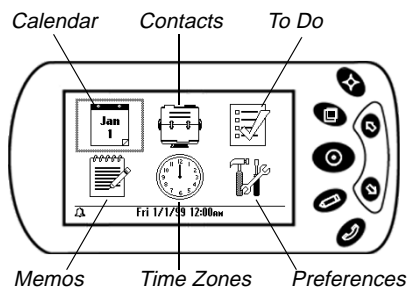

When you have completed the Setup Wizard, you will see the Home screen:



To enter a view, such as the Calendar, use  or  to highlight its icon, then press .

Using the Home screen:

Press or hold  until the Home screen appears. From the Home screen, use:

- ◆  and  to highlight the icons.
- ◆  to enter a module.
- ◆  to check the owner information.

Synchronizing with the clipOn

After you have completed the clipOn's Setup Wizard, described in "Getting started with the Setup Wizard" on page 4, you can quickly and easily synchronize data between a desktop application, such as TrueSync Desktop or Outlook, and the clipOn. Note that you must turn on the clipOn before starting synchronization. For details about TrueSync synchronization and using TrueSync Desktop, see "Synchronizing" on page 37 and "TrueSync Desktop" on page 47.

Getting connected for synchronization

To set up your clipOn for TrueSync synchronization:

- 1** Plug the 9-pin end of the clipOn's connector cable into your computer's serial port and the other end into the side of your clipOn.
- 2** Turn on the clipOn before starting communications between the clipOn and the computer.




For details about system requirements on your computer, please read "Requirements" on page 32.

NOTE If you have a password enabled on the clipOn, when you start synchronization you will be prompted to enter the five-key password combination on your computer. For details about enabling and setting a password, see "Using Preferences" on page 25.

Using the StarTAC clipOn Organizer

 
Calling with the StarTAC clipOn

To place a telephone call from the clipOn when it is attached to the StarTAC phone (for attachment instructions, see “Connecting the clipOn to your StarTAC” on page 2):


- 1 Turn on the StarTAC phone.
- 2 To dial, either:
 - ♦ highlight a valid telephone number in the Contacts, Calendar, or To Do views, and press the clipOn’s  key once.
 - ♦ press the clipOn’s  key in any view to see a list of the ten most recently dialed telephone numbers. To call one of those numbers, highlight it, and then press .

NOTE Telephone numbers that begin with “011” or “+” are dialed as international calls. All other telephone numbers are dialed as long distance domestic calls.

You will then see a dialog displaying the telephone number being dialed, as shown below.

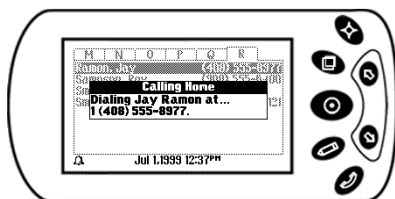


View the number that is being dialed.

To end a call, press the clipOn's  key again, press the phone's End key, or close the phone.

Using Contacts









 

Using Contacts, you can view and create contact information such as names, phone numbers, and addresses.

You can also make telephone calls quickly and easily, as described in “Calling with the StarTAC clipOn” on page 9. To enter the Contacts module from the Home screen, highlight the Contacts icon, and press .





Changing views


You will see either a category name or “All Cards” at the top right of the screen. “All Cards” means that you are viewing all the categories in your clipOn. If you have only one cardfile category (or no categories), “All Cards” will not appear.

Now you can:




- ◆ Scroll through the alphabetical tabs with  or .
- ◆ Go to a specific lettered tab by pressing , and then using  or . You can view a specific card by pressing , and then using  or . Press  again to view the details, and  to switch among the address, number, and note views of the card (the Contact information determines which views are available). The selected view is indicated

 in the top right corner by a house, telephone, or notebook icon.

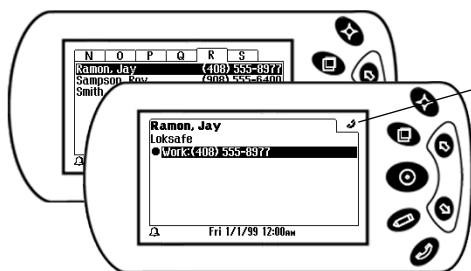- ◆ If you have more than one category, choose a category by pressing , highlighting the desired category with  or , and then pressing  to make your choice.








The telephone icon indicates that you are viewing telephone information.

If the contents of a cardfile field are too long to display, you will see three dots (...) at the end of the text to indicate that additional information can be viewed. To view the entire field if it is a number, highlight the number, and press . If it is a text field, use  or  to scroll.

Sorting cards

You can sort cards in cardfiles alphabetically by last name, first name, or company.

To sort cards:

- 1 In the Contacts module, press . The menu appears. Highlight Sort Order, then press .
- 2 Use  or  to move the highlight to the field by which you want to sort. Press  to choose the sort order.

Changing the telephone number display

You can determine which telephone numbers, e-mail addresses, and Web site addresses appear on the alphabetically tabbed cardfiles view.

To change the information displayed in the Contacts index view:

- 1 In the Contacts module, use or , then to go to a specific lettered tab.
- 2 Press , and then use or to highlight a specific card. Press again to view its details.
- 3 Use or to highlight the field that you want. You may need to press to move to the correct field. (You are in the telephone field if you see a telephone icon at the upper right corner of the card).
- 4 Press , and select “Select As Default.” This option appears only if there are multiple entries.

 
The selected item now appears after the name in the tabbed cardfiles view.

Editing your Contacts

You can create, edit, and delete Contacts by selecting Edit mode and using the clipOn's Wizards. In addition, you can set up a meeting or a telephone call from within a contact in Edit mode.

To create a new Contact:


- 1 Press in Contacts, or in the Home screen.
- 2 Use or to highlight the New Contact option, and press .

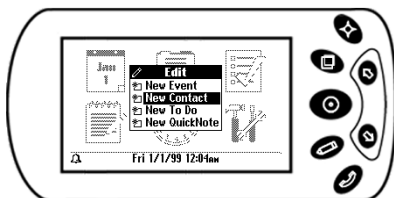

Press after highlighting New Contact.





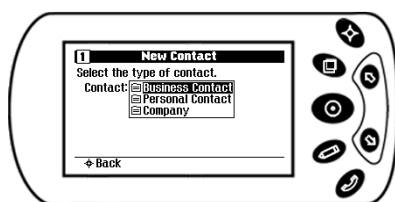 

















   - 3 Use or to select the type of Contact that you want. The Contact types are Business Contact, Personal Contact,




and Company; the fields will vary, depending on the type of contact that you choose.

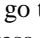





Choose the Contact type, and then press








- 4 Now enter the contact's first name or, if the contact is a Company, enter the name of the company. Use  or  to move from letter to letter, then press  to enter each choice. To change to numbers, press . Press  again to move back to letters. When you are finished, press .
 - 5 Enter the Contact's last name and press  when you are finished. (If you are entering a Company contact, this screen will not appear.)
 - 6 Now choose the category for your new Contact. If there are no categories, or only one category, this Wizard screen will not be displayed.
 - 7 Confirm the contact name by pressing . If you want to make a change, press .
 - 8 Depending on your selections, you may be asked to enter company information for the new Contact. Choose how to specify the company, then press :
 - ♦ If you choose "Company in Contacts" use  or  to scroll through the alphabetical tabs of a cardfile. You can press , and then use  or  to go to a specific lettered tab. Press , and then use  or  to go to the card for the company. To enter your choice, press .
 - ♦ If you choose "New Company" enter the company name, and press .
- Confirm the company name by pressing . If you want to make a change, press .

- 9 Next, enter the contact's phone, e-mail, or Web information. Use  or  to scroll and select the desired contact method, such as "Work Fax." Then enter the phone number, e-mail address, or Web site address. If you enter a telephone number without hyphens or parentheses, such as "18315553000", the clipOn will auto format it for you, adding hyphens and parentheses as needed, such as "1 (831) 555-3000". Press  when you are finished.






NOTE If the phone number is an international number, be sure to prefix it with "011" or "+". All other numbers will be dialed as domestic calls.






- 10 Confirm the contact information by pressing . To change it, press  or .
- 11 At the Contact Summary page, press  to accept the new contact and add it to the clipOn.





To remove a Contact:

- 1 Highlight the Contact, and then press .
- 2 Use  to move the highlight to Remove, and press . You will be asked to confirm the deletion of this contact. Highlight Yes and press  to complete the removal, or highlight No and press  to keep the Contact.


To set up a meeting or telephone call with a Contact:

- 1 Highlight the Contact, and then press .
- 2 Choose "Meet" or "Schedule Call" from the menu, and then press .
- 3 If you are scheduling a call, highlight High, Medium, or Low priority, and then press .
- 4 Next, select a meeting date or a due date for a call (you can specify "No due date" for a call but you must select a meeting date). To choose the meeting date or if you select "Specific Date" for a call, choose the month, date, and year, using  or  to scroll through each field; move from



field to field by pressing . For example, if you have used  or  to move the month to “Jan,” and then press , the highlight will move to the day field. Press  to undo your selection in a field.

- 5 If you are scheduling a meeting, after you enter the date, select a meeting start time. Then select the end time.
- 6 Press  to confirm the date (and time for a meeting).
- 7 If you are scheduling a meeting, you have the option of choosing a reminder for a meeting. Then press  to confirm.
- 8 The Summary screen will then conclude this task. Press  or, if you want to make a change, press . Calls are listed in To Do lists and Events in the Calendar.

Using the Calendar







 





Using the Calendar, you can view, modify, delete, and create appointments, birthdays, holidays, and other events. To enter the Calendar module from the Home screen, highlight the Calendar icon, and press .

Changing views (Daily, Weekly, Monthly)



To move from the Daily to the Weekly to the Monthly areas of your Calendar, press . You will see a menu of your options. Highlight the desired view, and press .

Viewing events

Press:

- ◆  or  to move to the next or previous day, week, or month, depending on the view.
- ◆  and then  or  to change months in the month view.
- ◆ , and then use  or  to highlight a Calendar event. To see the details of a highlighted event, press  again. Use  or  to scroll through the details.
- ◆  to bring up a menu of options.





Using reminder alarms

 
If you set a reminder alarm when you create an event in the clipOn, or set an alarm for an event in your PIM and synchronize, the clipOn alarm will remind you of that event. When an alarm sounds, go to the Home screen to read the reminder details. Press any key to turn off the alarm. Press  or  to clear the reminder notice.

Editing your Calendar




You can create, modify, and delete Calendar events by changing to Edit mode and using the clipOn's Wizards.


To create a new event:

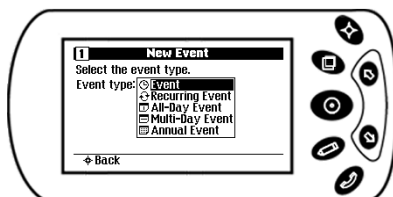
- 1 Press  in the Calendar module or in the Home screen, then choose New Event.
- 2 Choose the new event type by highlighting it using  or , and then press .



 




















Select the Event Type from the list.

- 3 The next Wizard screen will vary, based on the profile you chose during the StarTAC clipOn Setup. It will show a pre-set QuickList of event subjects. Use  or  to choose from the list, and then press .




To create an event that is not listed in the QuickList, select "Other Event." Then specify the event subject and press  when you are finished. This subject will be added to the top of your QuickList.

- 4 Confirm the event's type and subject by pressing .
- 5 Select an event participant (or None if there is no other participant). If you choose:


- ◆ to select a person or company from your Contacts, use  or  to scroll through the alphabetical tabs of a cardfile. Press , and then use  or  to go to a specific lettered tab. Press , and then use  or  to go to the card for the participant whom you want to add. Press  to enter your choice.
 - ◆ to schedule the event with a new person or company, specify the name and category as described in steps 4–6 on page 13.
- 6 To confirm the participant, press .
 - 7 Next, select the event date with  or . Use  to tab from the month to the day to the year. Press  again when the date is correct. If you are creating an event with a time, you will also need to select the start and end times.
 - 8 To confirm the date, press .
 - 9 If you are creating a recurring event, such as a weekly meeting, choose the recurrence pattern. The future occurrences of the event are automatically added to the Calendar, based on the recurrence pattern you select.
Use  or  to scroll through the list and highlight a recurrence pattern. Press  to enter your choice.
If you select a recurrence pattern, select the duration, such as “2 Weeks.” Highlight a duration, and press  to enter your choice. Confirm the recurrence pattern by pressing .
 - 10 Depending on the event, you may have the opportunity to set a reminder alarm. (See “Using reminder alarms” on page 16.)
 - 11 Press  to accept the Event summary.

To follow up, reschedule, or cancel an event:

- 1 Highlight the event in your Calendar. Press  to view the details if you wish.

- 2 Press , and then highlight the desired option: “Follow up” creates a new meeting; “Reschedule” moves the original meeting’s date. Press .
- 3 If you are:
 - ♦ following up or rescheduling an event, choose the new date and/or time, and press  to enter your selection.
 - ♦ canceling an event, you will be asked if you are certain that you want to delete the event. Select Yes to remove the event or No to keep the event.



To view details about an event participant:

 
- 1 Highlight the event in your Calendar.
- 2 Press .
- 3 Select “Find in Contacts” (if the participant no longer exists in Contacts, this option will not be displayed).


Using To Do Lists






Using the To Do lists, you can view tasks, calls, and deliverables. You can also create, reschedule, delete, and check off To Do items. In addition, you can make calls using phone numbers in To Do lists.

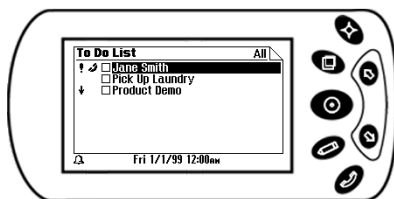To view To Do items:

- 1 From the Home screen, highlight the To Do icon, and press .
- 2 You will see a list of your To Do items. Highlight a To Do item, and press  to see the details of that item.








To see the details, highlight an item, and press .

- 3 After viewing the details, press  to return to the To Do list.
- 4 To see a list of your options in the To Do module, press . Use  or  to choose which To Do items you want to view, and then press .

Checking off completed items

You can check off a To Do item as completed. Then, when you synchronize to your desktop application, your To Do item will be checked off there as well.







To check off a completed To Do item:


- 1 Highlight the item by pressing  or , then press  to view the item's Details.
- 2 Press  to check off the item (or press  again to remove the completion check).
- 3 If the item that you check off was overdue, it will be removed from the Overdue Tasks List.

Creating To Do items

 
You can create To Do items using the clipOn, including tasks, calls, and deliverables.


To create a To Do item:






 
 


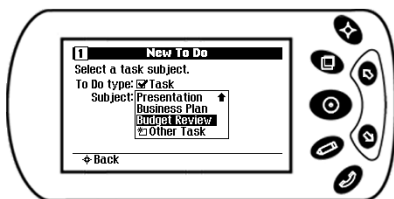 











- 1 Press , highlight "New To Do", and then press .
- 2 Highlight the type of To Do from the menu, and press .
- 3 If you are creating a task or deliverable To Do, select the subject. The list of subjects will vary, based on the To Do type and the profile you chose during the clipOn Setup. Press  or , then  to enter your choice.

To create a task or deliverable subject that is not listed, select Other. Then specify the event subject and press .












when you are finished. The subject will be added to your QuickList for this type of To Do item (task or deliverable).




Highlight the To Do's subject, and then press .

- 4 The Confirmation screen appears. Press  to accept your selection or press  to change it.
- 5 Depending on your selections, you may now be asked to select a participant. If you decide:
 - ♦ to choose a person or company from your Contacts, use  or  to scroll through the alphabetical tabs of a cardfile. You can press , and then use  or  to go to a specific lettered tab. Press , and then use  or  to go to the card for the participant whom you want to add. Press  to enter your choice.
 - ♦ to choose a new person or company as the To Do participant, specify the name and category as described in steps 4–6 on page 13.
- 6 To confirm the participant, press .
- 7 Select a priority for the To Do and then press .
- 8 Select a due date, if desired. If you chose Specific Date, choose the month, date, and year. Use  or  to scroll through each field, and move from field to field by pressing .
- 9 Confirm the due date by pressing . To change your selection, press .
- 10 At the Summary screen, press  to enter your new To Do item. If you want to return to a previous screen, press . Then press  to make changes.

To reschedule or remove a To Do item:

- 1 Highlight the To Do item with  or .
- 2 Press , highlight the Reschedule or Remove option, and then press . If you are removing the To Do item, press  to confirm the removal.
- 3 If you are rescheduling the To Do item, select the priority, then use  or  to choose the new date, and press  to enter your selection.
- 4 If you selected Specific Date from the menu, use  or  to change to a different month, day, and/or year, and then press  to confirm each choice.

To view details about a call participant:



- 1 Highlight the Call in your To Do lists.
- 2 Press .
- 3 Select Find in Contacts (if the participant no longer exists in Contacts, this option will not be displayed).
- 4 The card for the Contact included in that Call appears.






Using Memos

Use the clipOn to read or create Memos, including short single-line memos called QuickNotes that you can use as reminders.



You can add to a Memo at any time. Using the clipOn you can append to your Memos, but you cannot edit completed Memos by changing or deleting text. If you want to edit a Memo, synchronize it to TrueSync Desktop or another PIM. Edit it in that information manager, and then resynchronize.

 
To view or remove Memos:


- 1 At the Home screen, highlight the Memos icon, and press . A list of your Memos, including your QuickNotes, will appear. Highlight an item, and then press  to read it,






 
 


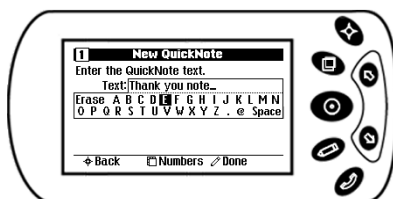

- using  or  to scroll. Press  to return to the Memos list.
- 2 Press  to select from your list of Memo categories.
 - 3 To see a list of your options for a Memo, highlight the Memo, and press . Highlight Remove to delete a Memo.

Creating a Memo

- 1 Press , highlight New QuickNote, and then press .
- 2 Enter the text of the Memo.



Press  to enter each letter or number.

- 3 Use  or  to move from letter to letter. Press  after each letter that you want to enter. Press  to change to Numbers, and to return to Letters. You can also choose to Erase a letter or number, and to add a Space or a period (.). Press  when you are finished.
- 4 Select the Filing Category from the list, using  or  to move from category to category. When the desired category is highlighted, press .
- 5 The Confirmation screen appears. Press  to accept your selection, or press  to revise it.
- 6 If you have entered too many letters to view, the truncated Memo will be listed followed by three dots (...) at the end of the text. View the contents of truncated Memo by highlighting it and pressing .


To append to a Memo:


- 1 Highlight the Memo using  or . Press  to view the details if you wish.

2 Press  and highlight the Append option, then press .

NOTE Appending to a Memo adds new text; you cannot edit existing text by selecting Append.

Using Time Zones

The clipOn has two clocks: the Home clock, which shows the time and date in your home city, and the World clock, which can show the times and dates in other cities around the world. To display the clocks, highlight the Time Zones icon, and then press .

Select a clock by highlighting it and then pressing . The selected clock's time becomes your Local Time. The status bar time will change accordingly, as will the times for scheduled events.




NOTE When you synchronize, the clipOn time and date are updated to the time and date on your computer.

Understanding time zones and travel

 
When you travel to a different time zone, change the time zone of the currently selected clock, and your calendar events will automatically change to reflect the new time zone. For example, an appointment scheduled for 2 p.m. in New York changes to 11 a.m. when you select Los Angeles.

Changing cities and time zones

You can change both the Home and World clocks to show different cities and/or time zones.

- 1 Move from the Home Clock to the World Clock by using  or .
- 2 Press  to change to a different city or time zone.

- 3 Use or to highlight your new choice, then press . See “Selecting cities” on page 66 for information about changing the cities displayed in the list.

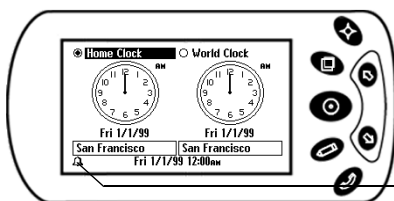

Use or to select the new time zone, and then press .

The bell icon indicates that the Alarm Sound is turned on.

Setting the clock

- 1 In the Time Zones module, press .
- 2 Highlight Time Preferences and press .
- 3 Highlight Clock Time and press .
- 4 Use or to change the month, date, year, and/or time. To move from field to field, press .

NOTE You can also change the alarm settings, alarm sound, and the format used for the time and date displays in the Time Preferences screen.

Setting alarms

- ◆ To change when the alarm sounds, highlight Alarm and press . Use or to move through the list to the alarm frequency that you desire. Then press . If you select *Daily*, an alarm will sound every day at the time you specify in Alarm Time. If you select *Once*, an alarm will sound only at the next occurrence of the specified time.
- To specify the time the alarm will sound, highlight Alarm Time and then press . Use or to change the hours, minutes, and/or PM or AM entries. Press to move from field to field.
- ◆ Highlight Alarm Sound and press to choose from alarm sound choices.

 
Using Preferences

Preferences include the Contrast, Orientation, Auto Shut-Off, Key Clicks, Day Start, and Area Code. Also use the Preferences module to set your password and clock, or view device information, such as the amount of free memory.

If you change the Orientation setting, the clipOn instantly adapts itself to either right-handed or left-handed use.

To change your preferences:

- 1 From the Home screen, highlight the Preferences icon, then press . In the Preferences screen, use or to move from one field to the next.

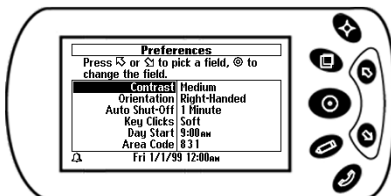


Use or to move from one field to another.

- 2 Highlight the field that you want to change, then press . Use or to scroll through the list. Highlight your choice, then press .

To change your password:

 - 1 Press in the Preferences module.
- 2 Press to highlight the Set Password option, then press .

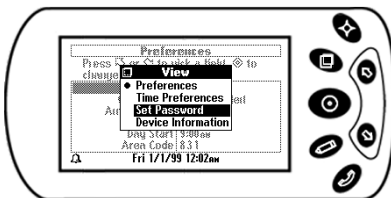



Highlight Set Password, then press .

- 3 If you want to protect the clipOn with a password, choose an option other than Disabled in the Password Lock field. Choose Disabled if you want to remove password protection.
- 4 To set a password, move to the Password field and press five keys. You can choose any order or combination of keys that you desire. When you have pressed five keys, you will return to the Set Password Screen. When you set a password, the Password Lock option changes to Always.

NOTE When the clipOn is password-protected, you cannot access it or synchronize without entering the password.

To view the device information:

- 1 Press  in the Preferences module.
- 2 Highlight Device Information, and then press .
- 3 View details about your clipOn.

Product care

Removing the clipOn from the phone

- 1 Slide the clipOn down and swing it away from the phone.
- 2 Lift the clipOn's hook out of the slot on the back of the phone.






Installing new batteries

The clipOn is powered by two CR2430, 3-volt lithium batteries, which can last for up to nine months of average use.

NOTE If you see a message, "Low Battery," it is important to replace the batteries promptly. Do not replace batteries during synchronization or sorting.

To remove the old batteries and install new batteries:

 
- 1 If the clipOn is attached to the phone, detach it.
- 2 Turn the clipOn over.
- 3 If the clipOn's plastic cover is attached, remove it by sliding the cover toward the spring clip. When the opposite end slides free, swing up the cover.
- 4 Slide the battery compartment door open.
- 5 Remove the old batteries.
- 6 Wait at least 5 seconds before inserting the new batteries.

- 7 Insert new batteries, with the positive (+) side facing up. If you do not hear a confirmation tone, you may need to reset the clipOn as described in the next section, “Resetting the clipOn”.
- 8 Carefully slide the battery compartment door back in until it snaps shut.
- 9 Set the clock by pressing  to display Time Preferences, then pressing  again to choose Clock Time. Use  and  to make your selection in each field, then press  to confirm each choice.






NOTE When you synchronize, the clipOn time and date are updated to the time and date on your computer.

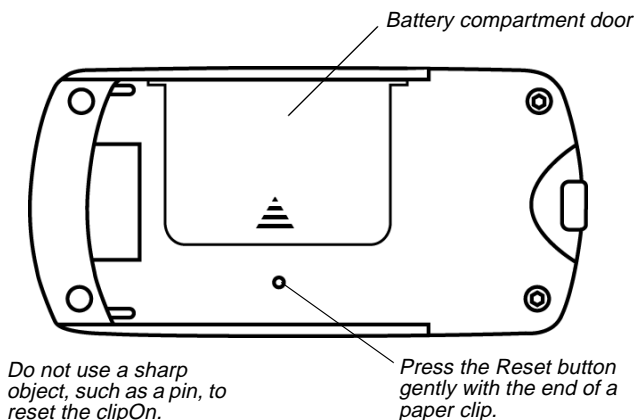Resetting the clipOn

If the clipOn does not respond after you change batteries, or does not function properly, you may need to reset it. To do so, insert the end of a paperclip into the reset button hole next to the battery compartment door. Press gently. When the clipOn resets, you will hear a confirmation tone.



NOTE Resetting the clipOn will not cause data loss.

After resetting, set the clock by pressing  to display Time Preferences, then pressing  again to choose Clock Time. Use  and  to make your selection in each field, and then press  to confirm each choice.

Charging the phone with the clipOn connected

When the clipOn is connected to your phone, charge your StarTAC by plugging the charger cable into the accessory connector on the bottom of the clipOn (the cable's release tab should face up toward the phone's keypad).

NOTE The clipOn will not function without batteries, even if it is plugged into the StarTAC charger.

Screen care

If the screen of the clipOn becomes smudged or dusty, gently wipe it clean with a soft, dry cloth.

TrueSync Desktop and TrueSync Plus

TrueSync Desktop is a full-featured personal information manager (PIM) for your contact names and addresses, calendar events, tasks, calls, and memos. TrueSync Plus provides direct synchronization among your desktop applications, devices, and/or services. Both software programs accompany your purchase.

Introducing TrueSync technology

Both TrueSync Desktop and TrueSync Plus use Starfish's TrueSync technology to synchronize your information, so you keep it current and accessible anywhere.

TrueSync supports the most popular desktop applications, devices, and services (referred to as accessors). Starfish continually provides free software updates, such as accessors for the most recent versions of popular desktop applications.

To check the Starfish Web site for software updates, click the Windows Start button. Choose Programs | TrueSync Plus | Product Updates or Programs | TrueSync Desktop | Product Updates. TrueSync's Component Install program will start. Check the Internet checkbox in the first screen and click Next.

Instructions for setting up TrueSync and synchronizing are provided in **"Synchronizing" on page 37**.

Requirements

Before you install TrueSync Desktop or TrueSync Plus, make sure that you have the necessary hardware and software listed here. Some features may require special configurations.

To use TrueSync Desktop or TrueSync Plus, you need:

- ◆ A computer running Windows 95, Windows 98, or Windows NT 4.0 workstation (U.S. English version)
- ◆ A minimum of 15 MB hard disk space for installation of either TrueSync Desktop or TrueSync Plus (includes 1 MB of temporary space on the same drive as your Windows directory for installation)
- ◆ 256-color VGA video adapter and compatible monitor
- ◆ An MPC 2 Compatible CD-ROM drive
- ◆ A pointing device compatible with Windows 95, Windows 98, or Windows NT 4.0
- ◆ A sound card and speakers, required to play sounds (.WAV files) for appointment alarms
- ◆ A printer supported by Windows 95, Windows 98, or Windows NT 4.0, required to print from TrueSync Desktop
- ◆ Microsoft Internet Explorer 3.01 or greater, or Netscape Navigator 3.0 or greater, required to view TrueSync Central. A browser is also required to view the *Troubleshooter Guide*.

Synchronization with a device may require an available communications port.

Installing the product

As with any product, Starfish recommends backing up your data files before installation and periodically as you continue to use the product. For help backing up your data, please visit the Starfish Web site:

<http://www.starfish.com/service/backup/>

Upgrade information

TrueSync Information Manager users: Installing TrueSync Desktop upgrades TrueSync Information Manager to TrueSync Desktop.

Sidekick 99 users: If you decide to use TrueSync Desktop instead of Sidekick 99, you must uninstall Sidekick 99 before installing TrueSync Desktop.

Installing TrueSync Desktop or TrueSync Plus:

Insert the TrueSync Desktop CD-ROM into your CD-ROM drive.

NOTE When you insert the TrueSync Desktop CD-ROM into your CD-ROM drive, the installation should launch automatically. If it does not, follow the steps below.

If the installation does not launch automatically:

- 1 Click Start on the Windows taskbar, then choose Run.
- 2 Click the Browse button.
- 3 Browse to locate the program SETUP.EXE on the CD-ROM.
- 4 To begin the installation, double-click SETUP.EXE.

The Readme file

Any last-minute changes or additions to TrueSync Desktop or TrueSync Plus are documented in a Readme file. View the TrueSync Desktop Readme file by clicking the Windows Start button and choosing Programs | TrueSync Desktop | Readme. To see the TrueSync Plus Readme file, click the Windows Start button and choose Programs | TrueSync Plus | Readme.

Registering

Be sure to register TrueSync Desktop and TrueSync Plus so that you can receive product information and support.

Uninstalling your product

If you want to remove TrueSync Desktop and/or TrueSync Plus from your computer, use the uninstall program, which permanently removes the product's program components. If you have data files in the TrueSync Desktop folder (usually Program Files\Starfish\TrueSync Desktop\Userdata), it does not remove them. You can save these files or remove them manually.

To remove the software from your computer

- 1** Click Start on the Windows taskbar. Choose Settings | Control Panel.
- 2** Double-click Add/Remove Programs.
- 3** Choose TrueSync Products from the listed applications.
- 4** Click the Add/Remove button.
- 5** Choose the components you want to uninstall.
- 6** Back up any data you want to keep, and then delete the TrueSync folder (usually Program Files\Starfish\TrueSync).
- 7** Restart Windows.

Starting TrueSync Desktop

After you complete the installation, TrueSync Desktop starts automatically. The first time TrueSync Desktop starts, the Setup Wizard prompts you for information about your name, company, and time zone.

Fill in the information in each panel of the Setup Wizard and click Next to continue. You can click Back if you need to change the information in an earlier panel. If you need assistance, click the Help button in any Wizard panel.

To start TrueSync Desktop later:

Click the Windows Start button and choose Programs | TrueSync Desktop | TrueSync Desktop.

Starting TrueSync Plus

Instructions for using TrueSync Plus are provided in “Synchronizing” on page 37.

About the documentation

This *User’s Guide* provides installation instructions, a guide to synchronizing, and an overview of TrueSync Desktop.

The *Troubleshooter Guide* helps you get started and provides access to online resources, including technical support information. To view the *Troubleshooter Guide*, choose Help | Troubleshooter from the TrueSync Desktop menu or click Start in the Windows Taskbar and choose Programs | TrueSync Plus | Troubleshooter. The Troubleshooter is an HTML document and starts in your Internet browser.

NOTE The illustrations in this guide are intended as examples. What you see on your screen may differ, depending on factors such as the software version and information that you have entered.

Using online help

Both TrueSync Desktop and TrueSync Plus include detailed online help systems. To open Help, press *F1*, or choose Help | Topics from within either program.

For more information

For technical support and additional information, refer to the Readme file (see “The Readme file” on page 33).

Synchronizing

Use Starfish TrueSync technology to synchronize your contact information, calendar events, tasks, and memos quickly and easily among your desktop applications, devices, and services.

Synchronize directly from TrueSync Desktop or, if you prefer to synchronize data from another personal information manager such as Outlook, use TrueSync Plus. Either choice provides complete and reliable synchronization.

Starting TrueSync:



TrueSync Desktop users:

Open TrueSync Desktop, and then click the TrueSync icon on the Desktop or select View | TrueSync.

TrueSync Plus users:

Right-click the TrueSync icon in the Windows taskbar, and click Configure.

Setting up TrueSync

The first time you start TrueSync, a Setup Wizard assists you in specifying:

- ◆ the clients you will synchronize (a client is any device, service, or desktop application supported by TrueSync). In some versions, the initial clients are preselected for you.
- ◆ details about each client, such as where to find the data for a desktop application or how you connect your device to your computer.

- ◆ which files, folders or categories you want to synchronize.

NOTE You can modify your selections after completing the Setup Wizard.

Using the TrueSync Setup Wizard

- 1 Click Next in the Welcome screen.
- 2 Select your desktop application, such as TrueSync Desktop or Outlook. Depending on your installation, the desktop application may be pre-selected.
- 3 Specify the location of your application's data. Depending on the application, you may have the option of specifying a different folder.
- 4 Select the device that you want to synchronize, if prompted. Depending on your installation, the device may be pre-selected.
- 5 Depending on the device, you may need to specify how you will connect your device to your computer.
- 6 If you use a service, you may be asked whether you want to synchronize with that service.
- 7 Depending on the service, you may need to enter your user ID for the service, password, and connection method.
- 8 You are prompted to connect your device to your computer. After the device is connected, and turned on if required, click Next.

TrueSync reads the data from the clients you have chosen. No data transfers or changes take place during this step.

 
- 9 If prompted, select your country and city to indicate your time zone.

The next step begins your selections of files, folders and categories to synchronize, starting with Contacts data. To learn how to select items to synchronize, see [“Selecting files, folders, or categories” on page 42](#). You can change your choices at any time after you have completed the Setup Wizard.

- 10** Specify which Contacts fields you want to synchronize. For details, see **“Selecting and mapping Contacts fields” on page 43.**
- 11** Specify the Calendar files or folders you want to synchronize.
- 12** Specify the Memos files or folders you want to synchronize.
- 13** Specify the To Do list files or folders you want to synchronize.
- 14** When you are satisfied with your selections, click Finish to display the TrueSync window. You can change your setup at any time as described in **“Changing the TrueSync setup” on page 40.**

Select View / TrueSync Central to display TrueSync Central, which provides free TrueSync services and synchronization over the Internet. For details, see page 46.

The TrueSync window displays your selections.

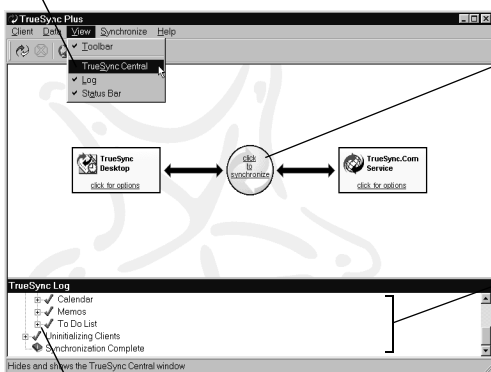

Click the TrueSync icon to synchronize.

The TrueSync Log shows you the results of your synchronizations.

Click the plus signs (+) to expand the TrueSync Log entries. Select an error message and press F1 for help.

Start Synchronization

Timezone Options

Calendar Options

To Do List Options



Stop Synchronization

Contacts Options

Memos Options

The TrueSync Toolbar.

When you perform the first synchronization between two clients, it is recommended that you **overwrite** the data in one of the clients to avoid duplicate records. To learn how, see [“Changing synchronization options” on page 41](#).

To synchronize:

- 1** Connect your device to your computer. Some devices may require that you turn them on before synchronizing.
- 2** Click the TrueSync icon in the center of the TrueSync window.
- 3** If you are synchronizing with a client that is password-protected, you may be prompted to enter your password.

NOTE Do not disconnect your device from your computer during a synchronization.

See the TrueSync Log for status and information about the synchronization. See [“Using the TrueSync Log” on page 45](#).

NOTE If you cancel an in-progress synchronization by clicking the Stop Synchronization toolbar button, wait until the synchronization has halted before closing TrueSync Desktop or the TrueSync window. The cancellation process may take some time to complete.

Changing the TrueSync setup

At any time after you have completed the TrueSync Setup Wizard, you can:

- ◆ add or remove clients.
- ◆ change the synchronization options for each client.
- ◆ select the data types to synchronize (data types are Calendar, Contacts, Memos, and To Do items).
- ◆ change the files, folders, or categories to synchronize.
- ◆ specify which Contacts fields to synchronize and how those fields map to corresponding fields in other clients.

To add a client to your configuration:

Choose Client | Add, then select the client from the Application, Device, or Service lists. You will be prompted to specify details about the client, such as which folders or categories to synchronize.

NOTE If you do not see the client you want to add, check for availability by clicking the Windows Start button and choosing either Programs | TrueSync Desktop | Product Updates or Programs | TrueSync Plus | Product Updates. After installing a new accessor, add it as a TrueSync client.

After you add a client, it is represented in the TrueSync window with an icon, which you can click to change options.


To remove a client:

Choose Client | Remove. Select the client and click the Remove button.

Changing synchronization options

To change how a client will be synchronized:

Choose Client | <clientname> options to display the client's Options Page. Use this page to specify how the client's data will be synchronized. For details about the synchronization options, click the Help button on the Options Page.

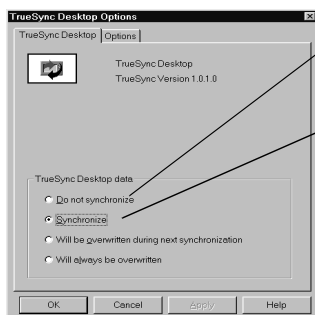 

Select *Do not synchronize* to exclude the client (TrueSync Desktop in this example) from synchronizations.

Select *Synchronize* to synchronize this client's data with data from one or more other clients. Records may be added, deleted, or modified on this client.

Select one of the overwrite options to overwrite this client's data with data from one or more other clients.

Selecting what to synchronize

All data types (Calendar, Contacts, Memos, To Do items) will be synchronized unless you specifically exclude them.

To exclude a data type from synchronization, choose Data | *<datatype>*, and check the “Do not synchronize *<datatype>*” option. The data type will be excluded from each synchronization until you uncheck the option.

To limit the range of Calendar event dates that will be synchronized to a device, choose Data | Calendar and click the Options tab. Limiting the range of dates speeds up synchronization and saves space on your device.

Selecting files, folders, or categories


Select a data type by choosing Data | *<datatype>*.

To select items to synchronize between clients:

- 1** Find the row for the item that you want to synchronize.
- 2** Click in the same row under the other client. A down arrow displays at the right of the column.
- 3** Click the down arrow to open a list of item choices on that client.

4 Click on your choice from the list:

 Each client's column lists the files, folders, or categories available for synchronization on that client. If you add items and do not see them in the list, click the Refresh List button.

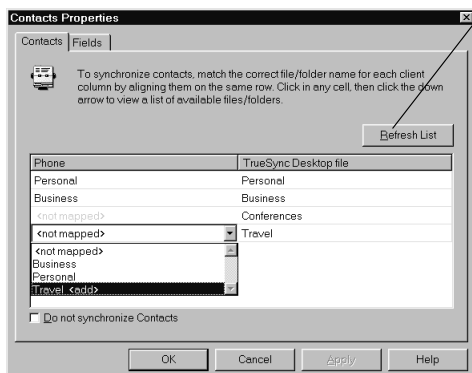

If you align <not mapped> in one column with an item in another column, it means that item will not be synchronized.

If you select an item followed by <add>, it will be created during synchronization.

The number of items you can synchronize to a device is limited by the device.

The number of files, folders, or categories that you can select is limited by devices. For example, suppose you have four Contacts folders set up for synchronization to a device, the limit for that device. You then decide to synchronize another Contacts folder. Before you can do so, you will need to deselect one of your mapped Contacts folders because of the device limit.

Selecting and mapping Contacts fields

The term “mapping fields” refers to matching one client’s field with another client’s field. For example, you might map a field called “Home Phone” on TrueSync Desktop with a field called “Personal Phone” on your device.

To map your Contacts fields:

- 1 Select Data | Contacts and click the Fields tab.
- 2 Highlight the files or categories containing the fields that you want to map.

3 Specify how to map the fields. You can choose:

- ◆ **SmartMap™** mapping by clicking the SmartMap button. SmartMap automatically maps your Contacts fields. All you have to do is choose one of the SmartMap options; your choice determines which fields to synchronize. For information about each of the SmartMap options, click the Help button.
- ◆ **Customized** mapping by clicking the Customize Mapping button. This option lets you map each pair of fields. To change mapping, click a field, click the down arrow at the right, and select the new mapping from the drop-down list. To save space on your device, unmap any fields you do not normally use.

Changing your preferences


To change the preferences for any client, choose Client | *<clientname>* options or click on the client's icon in the TrueSync window. This displays the client's Options Page described in **"Changing synchronization options" on page 41**. Depending on the client, there may be additional client preferences; click the additional tab(s), and change the options as desired. For assistance, click the Help button on each page.

Using QuickLists

Depending on the device that you are using, you may have the option to customize your QuickLists. When you are adding or changing data, QuickLists present you with choices, such as event subjects, task names, or short reminders, that reflect the profile you chose in your device's setup wizard. As you enter new items, the QuickLists include your additions. To change your QuickLists, choose Client | *<devicename>* options, and then click the QuickLists tab. If you need assistance, click the Help button.

Using the TrueSync Log

 The TrueSync Log displays messages about your recent synchronization sessions. The messages provide details about the progress and results of the synchronizations.



View or hide the TrueSync Log by choosing View / Log.

Select Synchronize | Options to specify how TrueSync displays TrueSync Log entries. Click the Help button for details.

To get help on error messages, highlight an error and click **F1**.

Setting up multiple users

If you use more than one synchronization configuration, or if more than one person uses the same computer to synchronize, set up an additional user to define each configuration.

To create an additional user:

- 1 Select Synchronize | Options, and then click the Users tab.
- 2 Click the New button and use the Setup Wizard to specify the synchronization preferences for the new user.
- 3 Select client preferences for the new user by choosing Client | <clientname> options.

To specify the user:

- 1 Choose Synchronize | Set User.
- 2 Select a user name from the list.

The current user name is shown on the TrueSync window title bar.

Staying up to date with TrueSync Central

TrueSync Central is your place on the Internet to:

- ◆ register your product electronically.
- ◆ get free software updates; accessories for your connected devices such as batteries, cables, and software; and the latest news about TrueSync synchronization.
- ◆ sign on to a free Internet Synchronization service, which provides access to secure, Web-based versions of your calendar, contacts, and notes.

To display TrueSync Central in the TrueSync window, make sure the View | TrueSync Central menu option is checked.

To register for a TrueSync Central account:

- 1** Go to TrueSync Central and register your product electronically.
- 2** Choose a user name and password for secure access to TrueSync Central and the Internet Synchronization service, TrueSync.com.
- 3** A setup wizard will help you add the TrueSync.com accessor to your synchronization setup.

To use Internet Synchronization after registering:

- 1** Go to TrueSync Central.
- 2** Use your TrueSync Central password to sign on to the Internet Synchronization service.
- 3** Use the Internet Synchronization service, TrueSync.com, to view and manage your data. If you need assistance while using TrueSync.com, click the Help button.
- 4** When your Internet data is ready to synchronize, click the TrueSync icon in the TrueSync window.

TrueSync Desktop


Using TrueSync Desktop's features

The following illustration shows the Calendar view and identifies the features common to most Desktop views.

Highlight any command on the menu bar and press F1 for help.

Click buttons on the Toolbar to perform tasks quickly, without using the menus. Pause to see a ToolTip identifying the button.

 Click an icon on the Desktop to change to a different Desktop view.

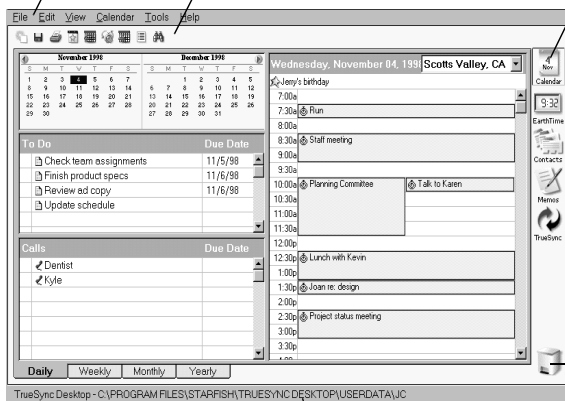

To change how the Desktop appears and set other display options, choose **Tools / Preferences / General**.

To delete a card, memo, or calendar activity, drag it to the Delete icon.

The Status bar displays information about the current view. Choose **View / Status Bar**.

Shortcut menus


If you right-click certain TrueSync Desktop objects, such as a Contact card, Calendar entry, memo, or EarthTime city, a context-sensitive shortcut menu appears. These menus provide basic editing commands and other commands specific to that object or view.

Customizing the Toolbar

To customize the buttons on the Toolbar in the Calendar or Memos view, choose Tools | Preferences | Toolbar; in the Contacts view, choose Tools | Toolbar; or double-click any open space on the Toolbar. The following dialog box appears:

To add a button

 - 1 Click the button you want to add in the Available buttons list.
- 2 Click the Toolbar button you want to add it before.
- 3 Click Add.

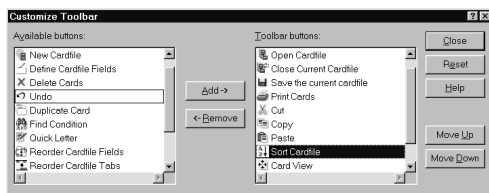

To move a button, click its name in the Toolbar button list, then click Move Up to move the button to the left or Move Down to move it to the right.


To remove a button, click it in the Toolbar buttons list, then click the Remove button.

- ◆ To return the Toolbar to its original view, click the Reset button.
- ◆ Any changes affect only the Toolbar for the current view. To customize a different Toolbar, select the desired view and make your changes there.

Setting preferences

You can customize TrueSync Desktop by setting its preferences. Choose Tools | General Preferences in the EarthTime and Contacts views or Tools | Preferences | General

 in the Memos and Calendar views for overall TrueSync Desktop preferences.

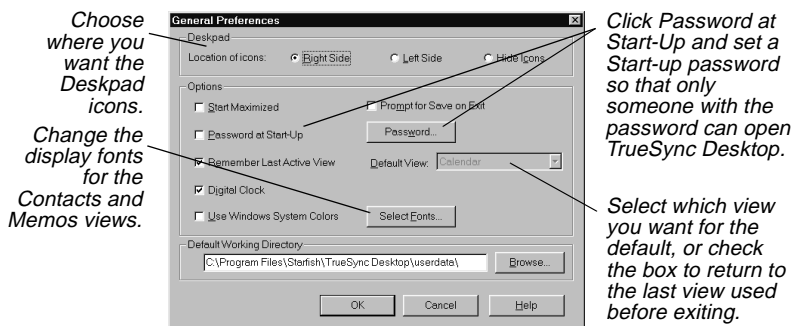

TrueSync Desktop: Calendar view


Using the Calendar view

The Calendar view is a powerful tool for helping you organize your appointments and other events. Use the Calendar to schedule events, set reminders, and maintain a list of To Do items and phone calls.




To change to the Calendar view, click the Calendar icon on the Deskpads, press *F6*, or choose View | Calendar.

 The following figure illustrates the Calendar Daily view.

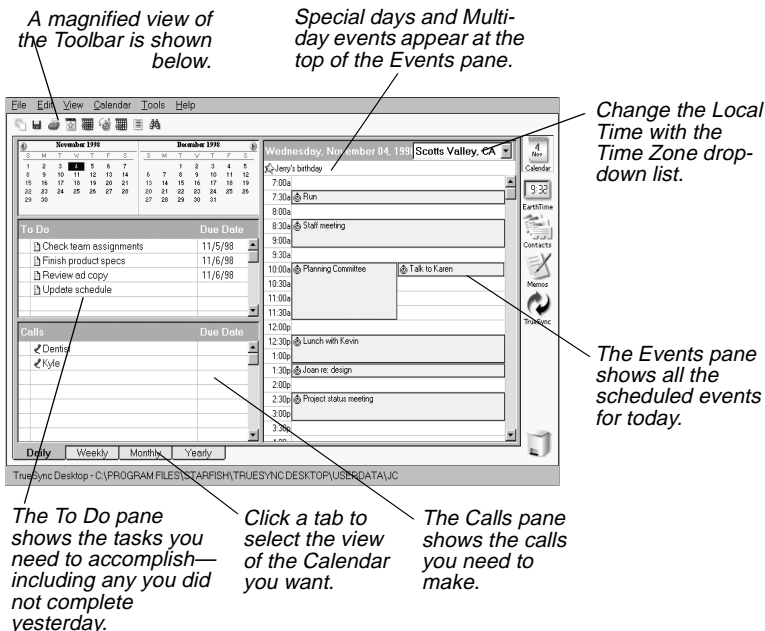

The Calendar Toolbar:

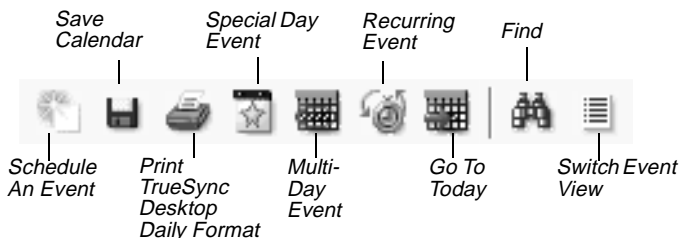 

Viewing your Calendar

To go directly to today's calendar:

Click the Calendar icon on the Desktop.

If you have changed to another date, clicking the Calendar icon returns you to today. Click the Calendar icon twice to return to today's daily view from another Calendar view.

Selecting dates in the Daily view

In the Daily view, the selected date is highlighted in the mini-calendar.


Change to the previous or next month by clicking the left and right arrows.

August 1996							September 1996							October 1996						
S	M	T	W	T	F	S	S	M	T	W	T	F	S	S	M	T	W	T	F	S
2	3	4	5	6	7	8	1	2	3	4	5				1	2	3			
9	10	11	12	13	14	15	6	7	8	9	10	11	12		4	5	6	7	8	9
16	17	18	19	20	21	22	13	14	15	16	17	18	19		11	12	13	14	15	16
23	24	25	26	27	28	29	20	21	22	23	24	25	26		18	19	20	21	22	23
30	31						27	28	29	30					25	26	27	28	29	30

Click a date in the mini-calendar to go directly to that day.

The Weekly and Monthly views

 The Weekly and Monthly views display scheduled activities in standard calendar formats. Change to a view by clicking its view tab.

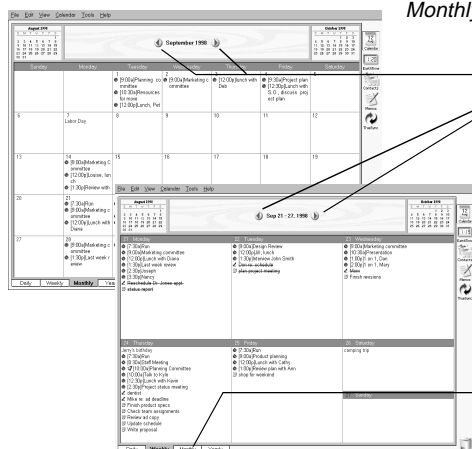

Monthly view

Change to the previous or next week or month using the left and right arrows.

 
Weekly view

Double-click a day in the Weekly or Monthly views to go to that day.

Click a tab to change to another view.

The Yearly View

The Yearly view displays only multi-day events, such as vacations and conferences. Change to the Yearly view by clicking its View tab.

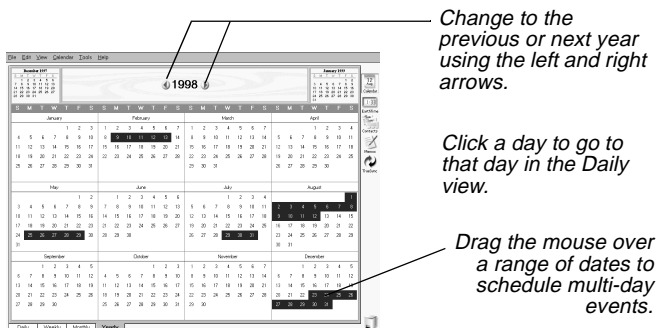

Scheduling events

Enter your appointments and scheduled events on the Events list. You can have a maximum of 288 events scheduled

throughout the day, and a maximum of three overlapping events starting at the same fifteen minute time slot.

 
Create an event by typing in an empty time slot, or click the starting time to open the Schedule an Event dialog box.

The bell icon indicates an alarm.

To change an event's starting time, drag its clock icon up or down.

Click an event and drag its bottom edge to change its ending time.

Double-click an event, or right-click an event and choose Edit, to edit its details.

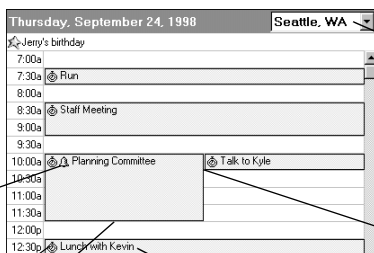

Change the Local Time using the Time Zone drop-down list.

Overlapping events appear side-by-side.

To create multi-day, special day, or recurring events, choose Calendar | Events and select one of the options.

When you travel: changing time zones

When you schedule events for a trip to a different time zone, select the time zone of your destination in the Schedule an Event dialog box, which opens when you click a starting time.

When you arrive, change the Local Time to your destination, using the Time Zone drop-down list at the top of the Events pane. All events you have scheduled for your trip will appear in the Local Time. In addition, you will be able to see any events back home in “real time,” adjusted for your current location.

 
For example, when you enter each appointment for a trip to New York, select the USA Eastern time zone. When you arrive in New York, change the Local Time to New York time. Your events adjust to display in New York time, whether those events are in New York or elsewhere. Thus an event you need to attend in New York at 10 a.m. will appear at 10 a.m. on your

calendar. If you need to phone in during a meeting in San Francisco that occurs at 2 p.m. (San Francisco time), it will appear on your calendar at 5 p.m. (New York time), so you know when to make the call.

After you synchronize to your device and/or service, your device and/or service also displays the appointment times using the Local Time you chose on the desktop.

Entering To Do items and calls

To create a new To Do item or Call, click any blank line in the To Do or Calls panes and begin typing. When you begin typing, TrueSync Desktop places an icon in front of the text.

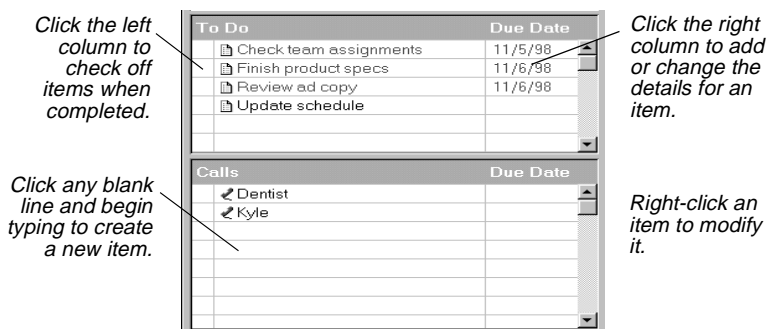

NOTE You can open calendars from previous versions of TrueSync Desktop and Sidekick in TrueSync Desktop 2.0. In the Calendar view, choose File | Open Calendar, then navigate to the previous version's Userdata directory. Choose the calendar, and click OK. These files will be permanently converted to TrueSync Desktop 2.0 format when opened, so it is recommended that you back up files from earlier versions first.

TrueSync Desktop: Contacts view

Using the Contacts view

Use the Contacts view to manage personal information stored in cardfiles, each of which can contain full address information and numerous other details about your contacts. Once you have updated your cardfiles, you can use the TrueSync window to transfer them to your device.




To open the Contacts view, click its Desktop icon, choose View | Contacts, or press **F5**.


Cardfile basics

In the left pane of the Contacts view is the card list, your visual index to the cards in the *active cardfile*—the cardfile whose tab is selected. In the right pane is the *current card* in the cardfile, which you can edit directly. Each cardfile can contain up to 30,000 cards.

 The following figure shows the Contacts view.

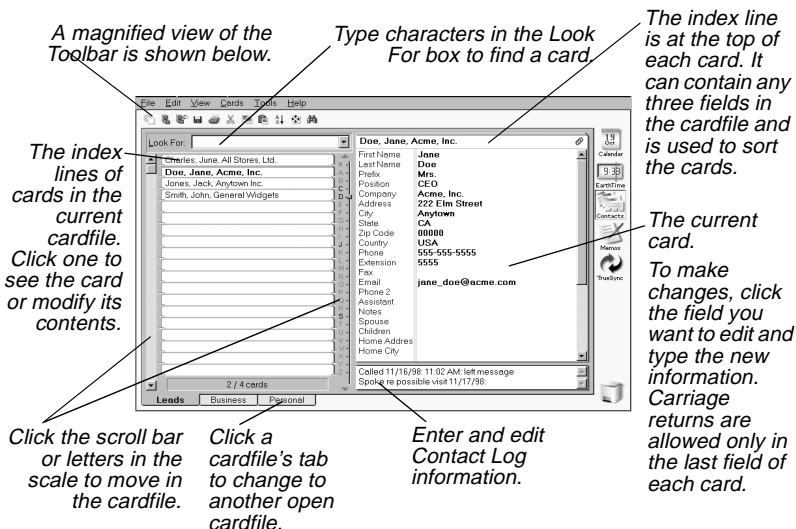

The Contacts Toolbar:

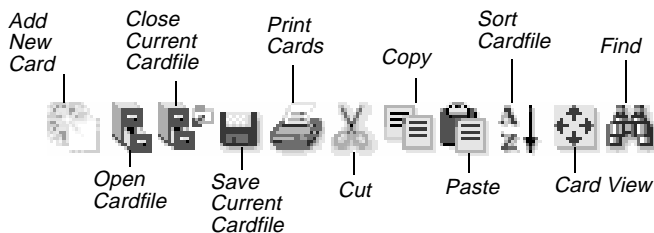 

You can display Contact Log information under the current card by clicking the paperclip icon in the index line. Each card has its own Contact Log, which can store up to 24 kilobytes of data. When you enter and edit Contact Log information, right-click to insert a date or time stamp into the log.


Creating a cardfile

When you create a cardfile, first decide what fields you want on each card. You can create all these fields yourself, or you can use a *template*—an empty cardfile that already has fields in place. If you select a template, you can customize it, keeping some or all of its fields and adding your own.

To create a new cardfile

Choose File | New Cardfile. Choose the template you want from the list that appears, as shown below.

 If you want to customize a cardfile, you may find it easier to edit the provided field names of a cardfile template rather than to create all of the field names.

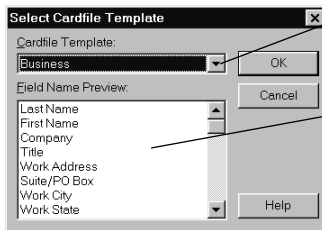

- 1 Click the arrow and choose each template individually from the list.
- 2 You can see the predefined fields for each template. When you find the best template for your needs, click OK. If you want to define all your own fields, choose None from the Cardfile Template list.

The new cardfile contains the field names from the template, but no information until you add cards.

NOTE If no cardfiles are open, use Cards | Define Fields to open the Select Cardfile Template dialog box.


Adding cards



To add a card to the cardfile, choose Cards | Add, or click the Add New Card button on the Toolbar. The Add Card dialog

box appears with a list of the fields that are set up in the cardfile.

- 1 *Type the information for each field in the list. To move from one field to the next, use the up and down arrow keys or the Tab key.*

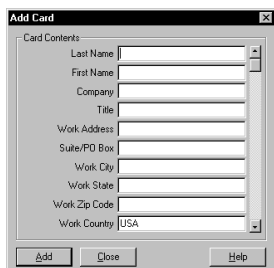

- 2 *Click Add to insert the card in the cardfile. You can then begin entering information for another new card, or click Close.*

TrueSync Desktop: Memos view


Using the Memos view

The Memos view lets you create memos, organize them in folders, and save them as files. You can apply formatting to your memos, and you can even create memos to merge with names from a cardfile.




To open the Memos view, click the Memos Desktop icon, press *F7*, or choose View | Memos.

 The following figure shows the Memos view.

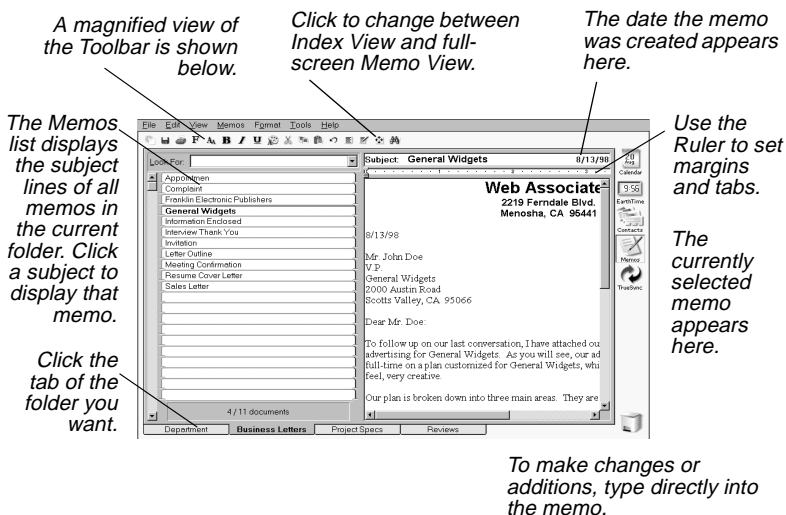

 Here is a magnified view of the Memos Toolbar:

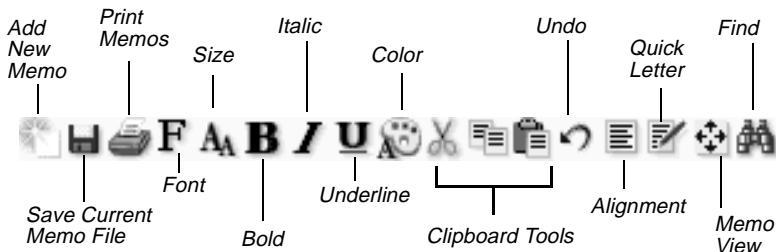


Memo files, folders, and memos

Memo files help you organize your memos by topic. A Memo file can contain many folders, and each folder contains one or more memos. Folders in an open Memo file are identified by tabs at the bottom of the Memos screen.

By using folders, you can organize memos according to projects, tasks, people, subject, or any other grouping.

Creating memos


To create a memo

- 1** Click the tab of the folder into which you want to place the memo.
-  **2** Click the Add New Memo button or choose Memos | Memo | Add. A new, blank memo appears, with the insertion point in the subject line.
- 3** Type a subject, and then press the Enter key to move into the body of the memo.
- 4** Type and format your text.

Changing margins and tabs

Use the ruler when you want to change margins or set a tab stop. To change more than one paragraph, select the paragraphs before you adjust the ruler.

If you do not see the ruler below the Subject, choose View | Ruler.

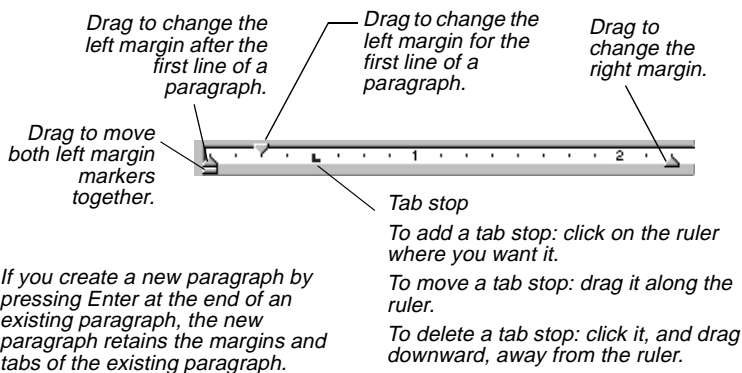 

TrueSync Desktop: EarthTime view

EarthTime displays a map showing daylight and nighttime around the world, and shows the current time in eight different cities you select. You can use EarthTime to calculate the difference in time between two locations, and you can configure it to show both your home location and the local time as you travel.




To open EarthTime, click the EarthTime icon in the Desktop or choose View | EarthTime. The Desktop icon shows the current time.

Depending on the device, your EarthTime settings, such as the Home clock, Local time, and the other world clock settings, may be transferred to your device when you synchronize.

The EarthTime map

When you click the EarthTime icon, you see a map of the earth. Light areas are in daylight, and the shading represents nighttime.

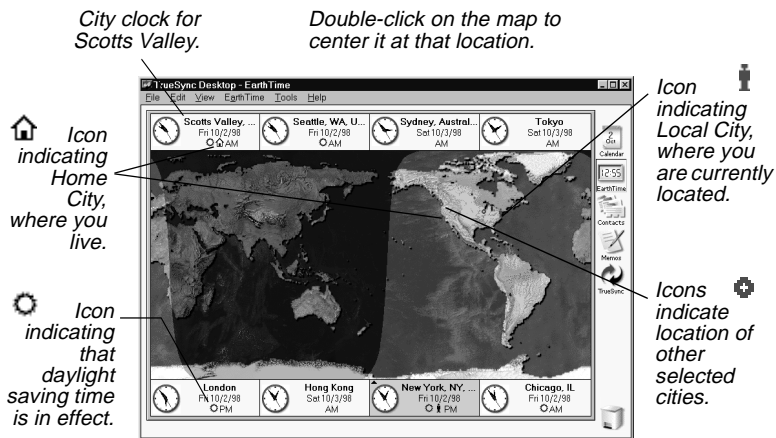 

Selecting cities

 
To change one of the displayed cities:

Click the panel containing the city you want to change.

1 Click the city panel and choose **Select a Different City** from the shortcut menu.

2 Specify a country, or view cities from all countries.

3 Choose a city from the list.

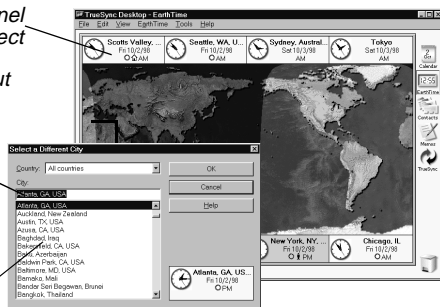

EarthTime has a database of over 540 cities from which you can select world city clocks to display.

NOTE Complete your first synchronization before changing the displayed EarthTime cities. If you change an EarthTime city before that initial synchronization, your device's city selections may overwrite your EarthTime city choices.

Changing the Local Time

Change the Local Time when you travel to display all your events in the current local time. For more details, see “[When you travel: changing time zones](#)” on page 55.

To change the Local Time when you change time zones:

- 1 Set one of the eight city panels to display the local city.
- 2 Click the panel containing the local city and click Set as Local Time from the shortcut menu.

An icon appears, to indicate the Local Time city. 

Changing the Home Clock

Your Home Clock indicates the time where you live. It should be set automatically when you first start TrueSync Desktop.

To change your Home Clock

- 1 Set one of the eight city panels to display your home city.
- 2 Click the panel containing your home city and click Choose As Home Clock from the shortcut menu.

An icon appears in the Home Clock panel. 

TrueSync Desktop: Printing

Using the Printing options


You can print from the Contacts, Calendar, or Memos views to a variety of formats, using either preprinted or customized forms. Preview your output before you print it to save time and materials.

Calendar printing

Select from a variety of formats for printing calendar activities, including TrueSync Desktop's daily, weekly, monthly, and yearly views. You can also print to paper forms for several popular organizers.

Printing in the daily format

Choose File | Print | Truesync Desktop Daily Format from the Daily view of the Calendar.

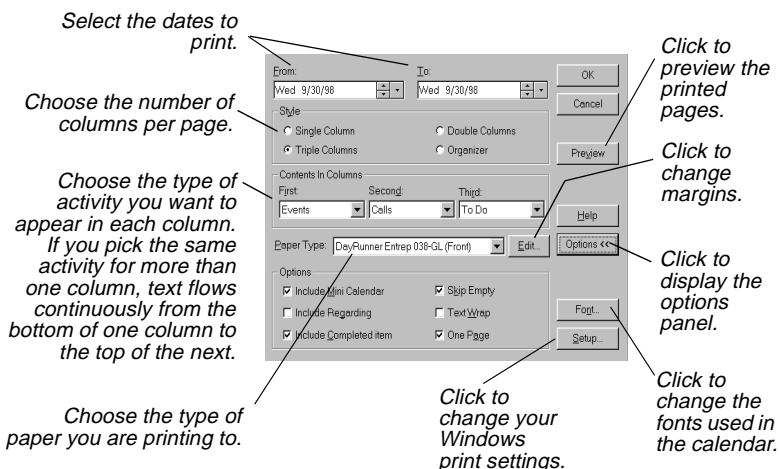 

Printing different formats

To print different calendar formats, including one-, two-, and six-week, monthly and yearly calendars, change to the view (Weekly, Monthly, or Yearly) that you want to print and Choose File | Print.

You can print using any paper size, including paper sized for your personal organizer.

Printing in Contacts view

You can print individual or several cards in the Contacts view.


To print one or more cards, choose File | Print | Cards, or click the Print button on the Contacts Toolbar. You can specify how many cards to print per page.

Printing labels, address book pages, and envelopes

You can also print Contact information using almost any label, address book page, or envelope size. Templates let you print in a variety of popular label, index card, and address book formats. You can modify these formats or create your own templates.

To print labels, address book pages, or envelopes

Choose File | Print, and select Labels, Address Book, or Envelopes. The Print Labels dialog box is shown in the example below.

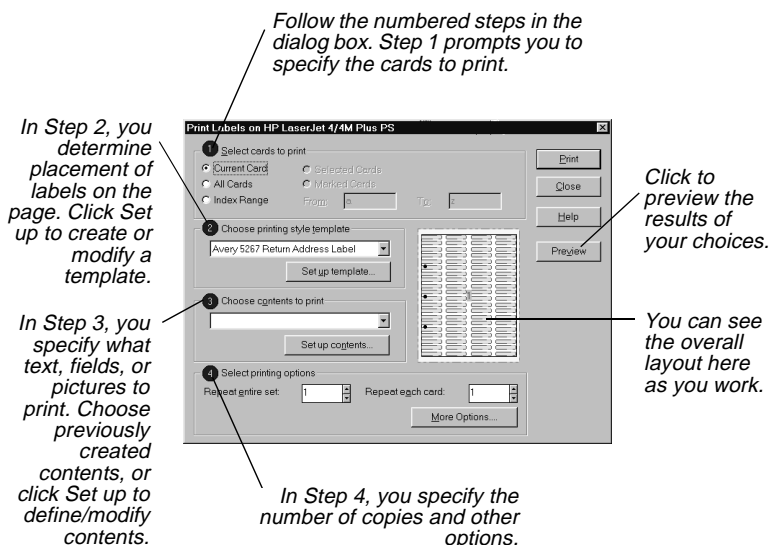 

The numbered steps are designed to help you specify what to print and arrange it within the print area available. The procedures for using all three dialog boxes are the same, but involve different templates and content arrangements.

Once you have specified the information in the four steps, click Preview to see the result. Click Print when you are ready to print.

Printing in the Memos view

To print memos, choose File | Print from the Memos view, or click the Print button on the Memos Toolbar. The Print Memos dialog box appears.

You can print a single memo, all of the memos filed in specific folders, selected memos, marked memos, or, after a search operation, memos listed in the Found window.

Glossary

A

accessor A software module that provides synchronization support for a specific TrueSync client. For example, when you add the Outlook accessor, you can synchronize your Outlook data with your other TrueSync clients.

application An information manager program, such as Outlook and TrueSync Desktop, that runs on your PC.

C

client Any TrueSync-supported application, device, or service that you can add to your TrueSync configuration. Before you can add a client, you must have that client's accessor installed on your PC.

D

data type In this guide, any of the information types you can synchronize, including Calendar, Contacts, Memos, and To Do items.

device A handheld information manager, such as a Palm™ Organizer, REX PRO™, and StarTAC® clipOn Organizer.

M

map The process of matching one client's contact fields or categories with another client's fields or categories for synchronization. For example, you might map a field called "Home Phone" on TrueSync Desktop with a field called "Personal Phone" on a device, and the data in the two fields will be synchronized. TrueSync's SmartMap feature performs mapping for you, or you can customize the mapping for any or all of your client fields.

P

PIM Personal Information Manager. Used in this guide to refer to an organizer program that runs on your PC.

S

service An online information manager, such as Yahoo!™ and TrueSync.com.

SmartMap™ The technology used by TrueSync to map your client contact fields automatically for synchronization. You have the choice of minimum, typical, or maximum mapping levels; these determine how many fields will be synchronized.

synchronization The process of replicating and reconciling your contact, calendar, calls, to do list, and/or memo information among two or more TrueSync clients. If you make changes in one place and then synchronize, those changes are reflected in all your other clients.

T

TrueSync® The technology that provides simultaneous, one-step synchronization among popular devices, applications, and services.

TrueSync Central The Internet site that you access from the TrueSync window, where you can register your product, get the latest TrueSync accessor updates and information, and sign on to a TrueSync.com account.

TrueSync.com The Internet home for the TrueSync Service (<http://www.truesync.com/>).

TrueSync Desktop The full-featured PC organizer that manages your contacts, calendar, calls, to do items, and memos. Synchronize information from TrueSync Desktop with any or all of your other TrueSync clients.

TrueSync Log A display for viewing messages resulting from your synchronization session that display in the Log pane at the bottom of the TrueSync window (if you don't see it, check View | Log). The messages provide details on the progress and results of your synchronization.

TrueSync Plus The TrueSync interface used for setting up and starting synchronizations among client applications, devices, and services without opening TrueSync Desktop.

TrueSync Service A free, web-based information manager (<http://www.truesync.com/>) that also provides synchronization services over the Internet with any TrueSync clients. Also called TrueSync Server.

TrueSync window The window that displays when you go to the TrueSync view in TrueSync Desktop or when you start TrueSync Plus.

A

adding
 cards 59
 icons to Toolbars 48
 memos 63
 tab stops 64
address book, printing 71
addresses 57
alarms 16, 55
alphabetical tabs 10
altering time zones 23
appointments, scheduling 54
arranging cards 11

B

Back key 4
batteries 27
 removing and installing 27
 reset after changing 28
battery icon 27
bell icon, clipOn 24
buttons (Toolbar)
 changing 48
 removing 48

C

Calendar 51
 Calls pane 52, 56
 changing dates 53
 changing time zones 55
 Daily view 53
 events 54
 Events pane 52
 printing 69, 70
 synchronizing events 42
 To Do pane 52, 56
 views 53
 views, clipOn 15

call memory 9
calls
 ending 10
 making 9
Calls pane (Calendar) 52, 56
canceling, events 17
card list (Contacts) 57
card views 10
cardfiles 57
 creating 59
 selecting 11
cards, adding 59
changing
 Calendar dates 53
 cities 23
 client preferences 44
 clipOn password 25
 Contact cards 58
 EarthTime clocks 67
 EarthTime locations 66
 fonts, TrueSync Desktop 49
 memo margins 63
 print settings 70
 synchronization options 44
 time zones 23, 55
 To Do items and Calls 56
 Toolbar buttons 48
 TrueSync Desktop 48
charging phone 29
checking off To Do items 19
cities, EarthTime 66
cleaning 29
cleaning screen 29
clients, changing preferences 44
clipOn. See StarTAC clipOn
 Organizer
clock, clipOn
 setting 24, 29
 time display 24

- time zones 23
- clocks, EarthTime 67
- connecting clipOn
 - to phone 2
 - with PC 8
- Contacts 57
 - adding 12
 - adding cards 59
 - creating new files 59
 - editing 58
 - icons, clipOn 10
 - Log 58
 - printing cards 70
 - removing 14
 - synchronizing 42
 - tabs 10
 - templates 59
- creating
 - cardfiles 59
 - Contacts, clipOn 12
 - events 54
 - events, clipOn 16
 - memos 63
 - Memos on clipOn 22
 - To Do items and Calls 56
 - To Do items, clipOn 19
- customizing
 - Toolbars 48
 - TrueSync Desktop 48

D

- Daily view
 - Calendar 53
 - clipOn 15
- date display, clipOn 24
- dates, changing 53
- default
 - directories 49
 - views 49
- deleting
 - Contacts, clipOn 14
 - Delete icon 47

- To Do items, clipOn 21
- Desktop 47
- device information,clipOn 26
- dialing numbers 9
- directories, default 49
- displaying telephone numbers 11
- Down key 4

E

- EarthTime
 - resetting clocks 67
 - selecting cities 66
- Edit key 3
- editing 5
 - Calls 56
 - contacts 58
 - events 55
 - text, clipOn 5
 - To Do items 56
- e-mail addresses 11
- ending a call 10
- ending times, events 55
- entering text, clipOn 5
- envelopes 71
- events
 - canceling 17
 - creating 16
 - maximum scheduled 54
 - overlapping 55
 - rescheduling 17
 - scheduling 54
 - synchronizing 42
 - viewing 15
- Events pane (Calendar) 52, 54

F

- files, memo 62
- folders, memo 62
- fonts 49
- full-screen view, memos 62

G

getting started, clipOn setup 4
globe, EarthTime 65
Go to today shortcut 52

H

hardware requirements 32
help 35
Home Clock 23, 67
Home key 3
house icon 10

I

icons
 clipOn contacts 10
 clipOn views 7
 Toolbars 48
index cards, printing 71
Index View, memos 62
installation 32, 33
 requirements 32
 upgrading 33
installing batteries 27
international time zones 65
Internet Synchronization 46

K

keys, clipOn 3

L

labels 71
lettered tabs 10
letters 61
Local Time 23, 67
 changing 55

M

mailing labels 71
making a call 9

map, EarthTime 65
margins 63
meetings, scheduling 14, 51
Memos 61

 creating memos 63
 creating on clipOn 22
 formatting memos 63
 memo files 61, 62
 printing 72
 removing on clipOn 21
 synchronizing 42
 viewing on clipOn 21

menu bar, TrueSync Desktop 47
menus, shortcut 48
mini-calendar 53

Monthly view
 Calendar 53
 clipOn 15

multi-day events, viewing 52

N

new
 batteries 27
 Contacts, clipOn 12
 events 16
Next key 4
notebook icon 10

O

online help 35
opening
 Calendar 51
 Contact cardfiles 58
 EarthTime 65
 Memos view 61
organizing, tasks 51
overview, TrueSync Desktop 47

P

password
 clipOn 25

- synchronizing when enabled 8
- TrueSync Desktop 49
- phone calls 9
- phone numbers, last 10 dialed 9
- phone, charging 29
- placing a call 9
- preferences
 - client 44
 - clipOn 25
 - general 48
- previewing printing 71
- printing
 - address books 71
 - calendar formats 69, 70
 - Contacts cards 70
 - envelopes 71
 - index cards 71
 - labels 71
 - memos 72
 - previewing 71
- product care, screen 29
- product requirements 32
- profile, selecting 4
- protecting 29

Q

- QuickLists 44
- QuickLists, on clipOn 4, 16, 20
- QuickNotes, clipOn 21

R

- Readme file 33
- recently dialed numbers 9
- registering products 33
- reminder alarms 16
- removing 21, 27
 - clipOn from phone 27
 - Contacts 14
- rescheduling
 - events 17
 - To Do items 21

- resetting
 - clipOn 28
 - EarthTime clocks 67
- re-sorting cards 11
- ruler (memos) 63

S

- scheduling
 - calls 14
 - events 54
- screen, cleaning 29
- Select key 3
- selecting profiles 4
- setting
 - alarms 16
 - clock display 24
 - default directories 49
 - default views 49
 - margins 63
 - preferences 48
- setting up
 - calls 14
 - meetings 14
- Setup Wizard
 - clipOn 4
 - TrueSync 37
 - TrueSync Desktop 34
- shortcut menus 48
- sorting cards 11
- special days, viewing 52
- StarTAC clipOn Organizer
 - basics 3
 - batteries 27
 - bell icon 24
 - Calendar 15
 - charging phone 29
 - cleaning screen 29
 - connecting 8
 - connecting to phone 2
 - Contacts 10
 - device information 26
 - editing text 5

- keys 3
- making a call 9
- Memos 21
- password 25
- Preferences 25
- product care 29
- removing from phone 27
- resetting 28
- Setup Wizard 4
- synchronizing 8
- To Do items 18
- turning off (Home key) 3
- turning on 3
- starting
 - clipOn 3
 - TrueSync Desktop 34
- starting times, events 55
- starting TrueSync 37
- start-up password, TrueSync Desktop 49
- status bar
 - clipOn 4
 - TrueSync Desktop 47
- synchronization
 - clipOn 8
 - Internet 46
 - options, changing 44
 - selecting data types 42
 - setting up 37
 - starting 40
 - stopping 40
 - TrueSync log 45

T

- tab stops (memos) 63
- telephone
 - calls with clipOn 9
 - icon 10
 - number display 11
- templates (Contacts) 59
- text
 - entering on clipOn 5

- margins 63
- tabs 63
- time display, clipOn 24
- time zones 23, 65
 - changing 23, 55, 67
- To Do items 18, 21
 - checking off 19
 - creating 19
 - removing 21
 - rescheduling 21
 - synchronizing 42
- To Do pane (Calendar) 52, 56
- Toolbars 47
 - Calendar view 52
 - changing buttons 48
 - Contacts view 58
 - customizing 48
 - removing buttons 48
 - TrueSync window 39
- traveling, scheduling events 55
- TrueSync 37
 - log 45
 - Setup Wizard 37
 - starting 37
 - stopping synchronization 40
- TrueSync Central 39, 46
- TrueSync Desktop
 - customizing 48
 - installing 32
 - overview 47
 - registering 33
 - setting up 34
 - starting 34
- TrueSync Plus, starting 37
- turning off alarms 16

U

- uninstalling TrueSync Desktop 33
- Up key 4
- user profile, selecting 4

V

View key 3

viewing

events, clipOn 15

multi-day events 52

special days 52

time zones 65

To Do items 18

views

Calendar 53

Contacts 58

customizing 48

EarthTime 65

Memos 62

printing Calendar 70

setting default 49

TrueSync Desktop 47

W

Web site addresses 11

Weekly view

Calendar 53

clipOn 15

Wizard

clipOn Setup 4

TrueSync Desktop Setup 34

TrueSync Setup 37

World clock 23

world map 65

Y

Yearly view, Calendar 54

Z

zones

changing time 23

Software License Agreement, Disclaimer, and Limitation of Liability

IMPORTANT. READ CAREFULLY. As with any product, Starfish recommends backing up your data files before using this product, and then periodically as you continue to use it. For help backing up your data, please visit the Starfish Web site at: <http://www.starfish.com/service/backup/>

In this document TrueSync Plus, TrueSync Desktop, and TrueSync Component Install are together called "PC Software". All software on the StarTAC clipOn Organizer device are together called "Device Software".

This Software License Agreement, Disclaimer, and Limitation of Liability (together called "Agreement") is a legal agreement between you (an individual or a single entity) and Starfish Software, Inc. ("Starfish"). This Agreement covers the PC Software, the Device Software, and all software and files that are downloaded or installed at any time (including the future) using the TrueSync Component Install or TrueSync Plus programs. The PC Software includes components known as "Accessors" that may be used with TrueSync Plus. The downloaded or installed software and files may include without limitation TrueSync Plus, TrueSync Desktop, Accessors, and/or updates. All such PC Software, Device Software, and downloaded or installed software and files, and any associated media, printed materials, and/or "online" or electronic documentation, are together called the "Software Product" in this Agreement.

By downloading, installing, copying, or otherwise using the Software Product, you acknowledge that you have read this Agreement and agree to be bound by its terms. If you do not agree to the terms of this Agreement, do not download, install, copy, or otherwise use the Software Product.

A. License for Individual Use

The Software Product is licensed, not sold, to you for your own individual use only. You may install the PC Software on a single computer for use by a single, particular user. You may make a single copy of the PC Software, for archive purposes only.

Each Accessor is licensed only for use with, and on a same computer as, a compatible version (if one exists) of TrueSync Plus (or TrueSync Desktop) that you have validly licensed from Starfish.

The Software Product is protected by U.S. and international copyright law and treaties, as well as other intellectual property law and treaties, and cannot be copied or otherwise made available to more than one person at the same time without violating the law. Starfish reserves all rights not specifically granted in this document.

B. Other Limits on Your Use

Except as otherwise specifically described in this Agreement, you may not transfer, rent, lease, lend, copy, modify, translate, sublicense, time-share, or electronically transmit or receive the Software Product. The Software Product is licensed as a single product. The PC Software's component parts may not be separated for use on more than one computer. The Device Software may not be used in any device other than the particular device in which it originally came. You acknowledge that the SoftwareProduct in source code form remains a confidential trade secret of Starfish. You agree not to modify or attempt to reverse engineer, decompile, or disassemble the Software Product, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

C. Disclaimer of Warranties

YOU EXPRESSLY AGREE THAT USE OF THE SOFTWARE PRODUCT IS AT YOUR SOLE RISK. THE SOFTWARE PRODUCT IS PROVIDED ON AN "AS IS" AND "AS AVAILABLE" BASIS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, STARFISH AND ITS SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES AND CONDITIONS, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT, WITH REGARD TO THE SOFTWARE PRODUCT AND THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES.

Starfish makes no representation or warranty regarding the content of the Software Product, including its computer software and documentation. For example, Starfish does not warrant that the computer software or documentation are "error-free" or will meet the needs and requirements of a particular user. All information in the Software Product, including the software and documentation, is subject to change without notice.

D. Limitation of Liability

To the maximum extent permitted by applicable law, Starfish and its suppliers expressly disclaim any liability for damages arising from the use of this Software Product or any other damages, including (though not limited to) lost profits or data, special, incidental, consequential, indirect, or other damages or claims, even if Starfish or its suppliers has been specifically advised of the possibility of such damages or claims. Regardless of the form of the damage or claim, the only liability Starfish or its suppliers will have to you or any other person will be limited to the amount actually paid for your product of which the Software Product is a part, or \$100 (U.S.), whichever is greater. Because some states and jurisdictions do not allow the exclusion or limitation of liability, the above limitation may not apply to you.

E. Miscellaneous

This Agreement can only be modified in writing signed by you and an authorized officer of Starfish. If any part or provision is found to be unenforceable or void, the remainder shall be valid and enforceable. If any remedy provided is determined to have failed of its essential purpose, all limitations of liability and exclusions of damages shall remain in effect. Use, duplication, or disclosure of the Software Product and documentation by the U.S. Government is subject to the restricted rights applicable to commercial computer software (under FAR 52.227-19 and DFARS 252.227-7013). Export or re-export of the Software Product is subject to the U.S. Commerce Department export restrictions. The Software Product is intended for use in the country in which the product or package of which the Software Product is a part is first sold (or the EEC if first sold in the EEC).

This Agreement shall be construed under the laws of California, U.S.A. You have specific legal rights under this document, and may have other rights that vary from state to state and country to country.

